


Introduction of Standard Touch Screen


❖ Main Interface

The position and pressure values will be displayed visually during the pressing process

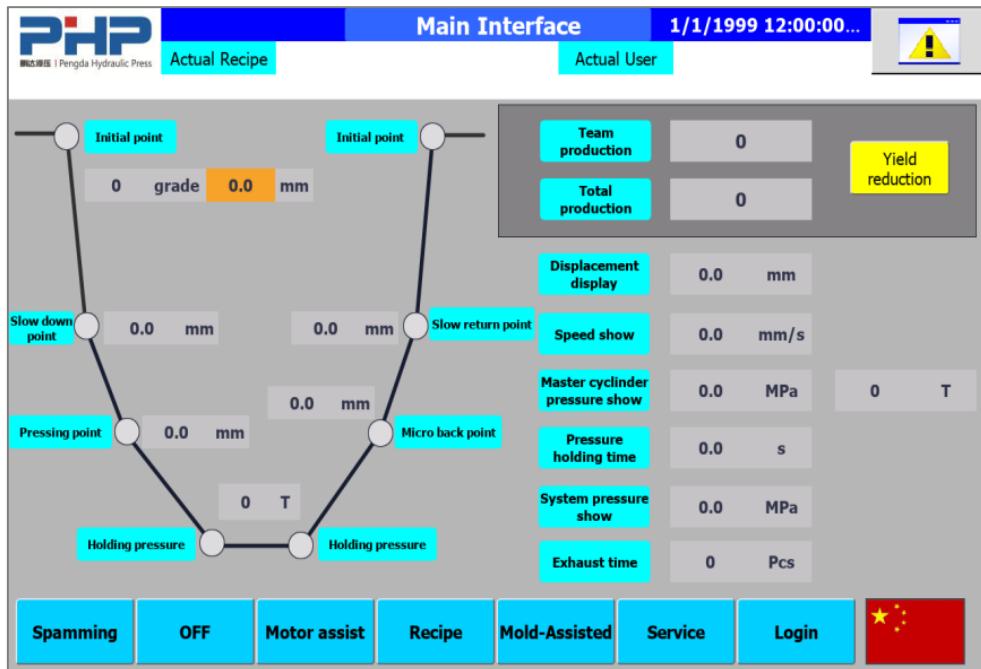


❖ Formula Parameters Interface

The parameter formula can be set, saved and used in the interface.

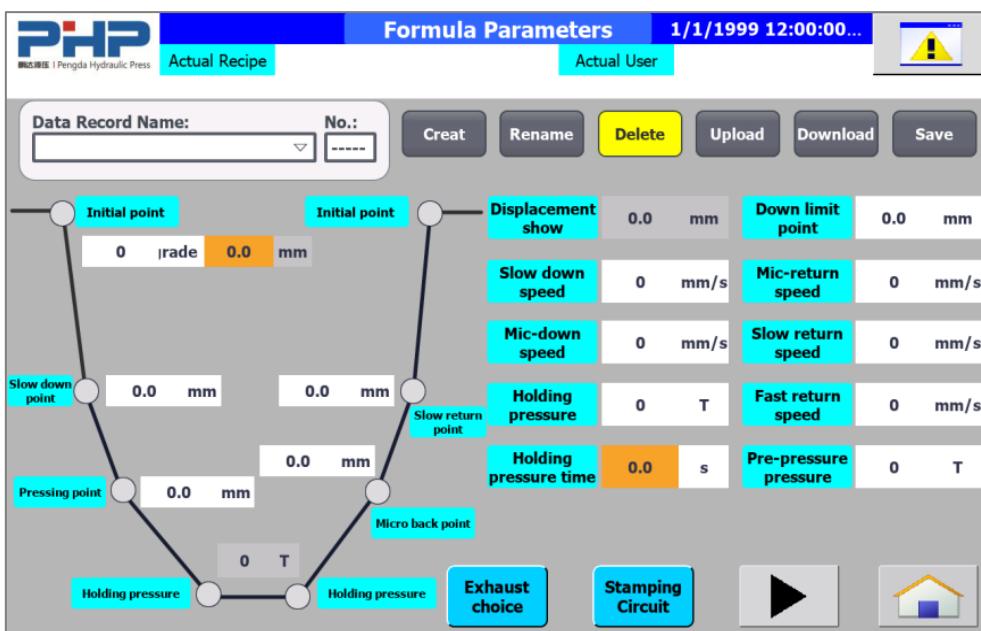

✧ Exhaust Set Interface


The exhaust function can be activated in this interface and the parameters can be set here.

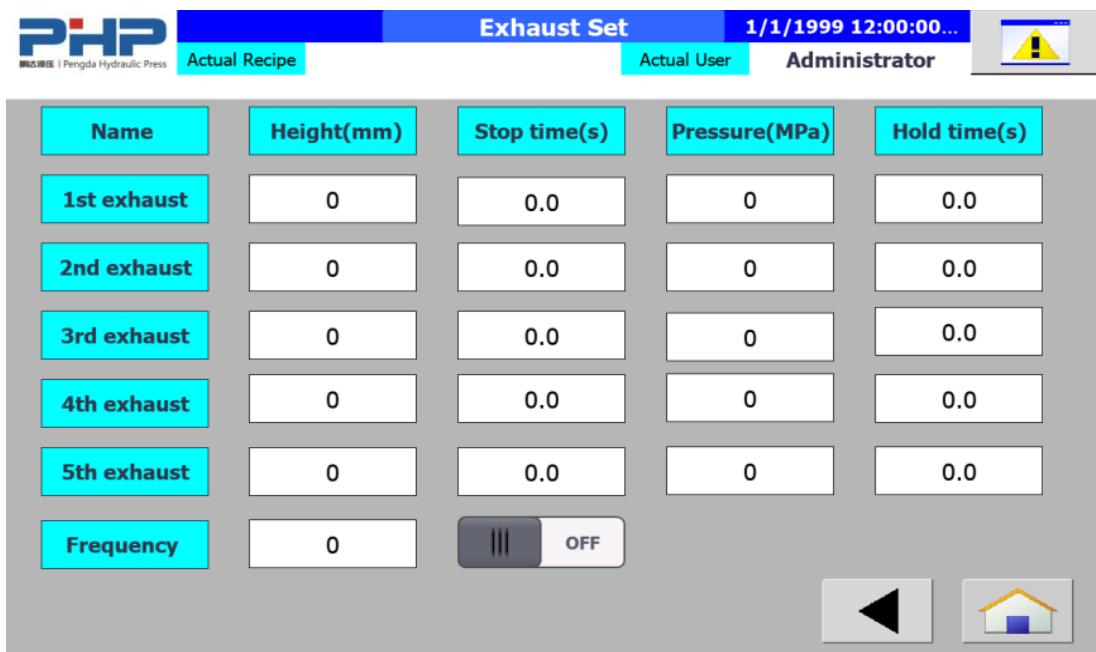

Name	Height(mm)	Stop time(s)	Pressure(MPa)	Hold time(s)
1st exhaust	0	0.0	0	0.0
2nd exhaust	0	0.0	0	0.0
3rd exhaust	0	0.0	0	0.0
4th exhaust	0	0.0	0	0.0
5th exhaust	0	0.0	0	0.0
Frequency	0	III OFF		

✧ Mold Action Interface

The actions of standby oil pipes can be set hereto meet the requirements of clients

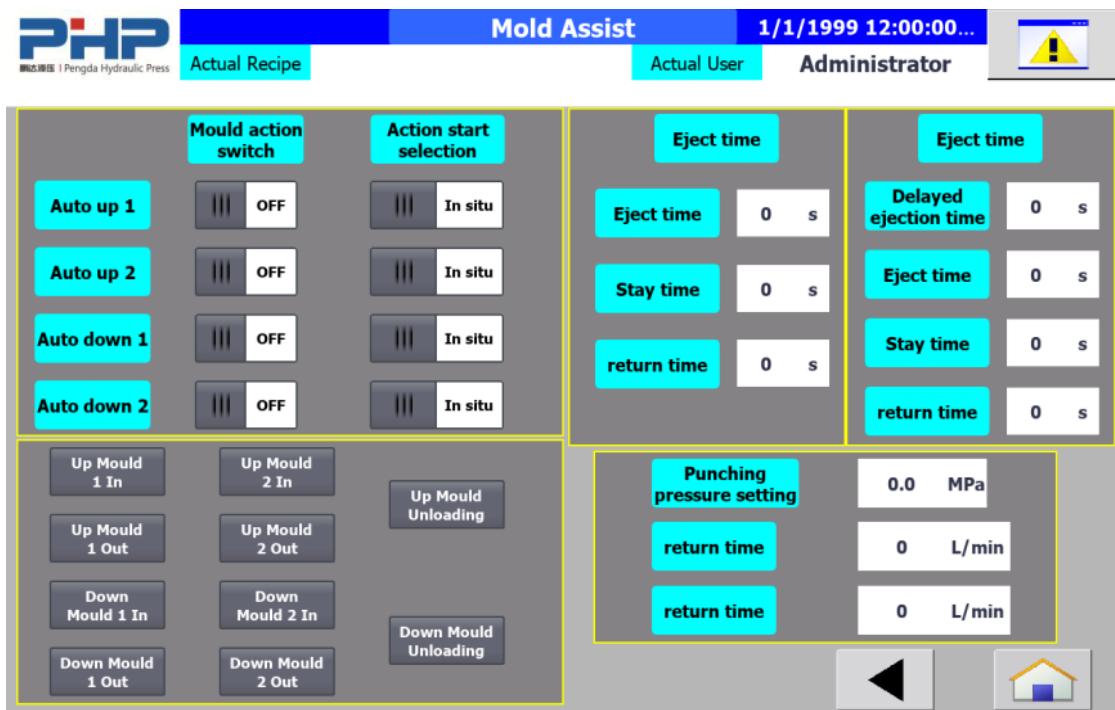

Mould action switch	Action start selection	Eject time	Eject time
Auto up 1	III OFF	0 s	Delayed ejection time 0 s
Auto up 2	III In situ	0 s	Eject time 0 s
Auto down 1	III In situ	0 s	Stay time 0 s
Auto down 2	III In situ	0 s	return time 0 s
Up Mould 1 In	Up Mould 2 In	Punching pressure setting 0.0 MPa	0 L/min
Up Mould 1 Out	Up Mould 2 Out	return time 0 L/min	0 L/min
Down Mould 1 In	Down Mould 2 In		
Down Mould 1 Out	Down Mould 2 Out		
		Up Mould Unloading	Down Mould Unloading




✧ Input/Output Signal Interface

PLC signal conditions can be seen through the two interfaces to confirm whether the press is used normally

Actual Recipe		PLC Output								1/1/1999 12:00:00...	
		Actual User								!	
Q0.0-0.7		Q1.0-1.7		Q2.0-2.7		Q3.0-3.7		Q4.0-4.7		Q5.0-5.7	
00	1# drive power output	10	YV8	20	YV10	30	YV31	40	Enable output	50	Lock release signal
01	YV1	11	YV9	21	Spare	31	YV32	41	Lock in	51	Locking lock signal
02	YV2	12	Empty	22	Spare	32	YV33	42	Lock back	52	Dangerous operation
03	YV3	13	Empty	23	YV21	33	YV34	43	Work light output	53	Upward warning output
04	YV4	14	Empty	24	YV22	34	YV35	44	Reset output	54	Red light output
05	YV5	15	Empty	25	YV23	35	YV41	45	Reset indicator output	55	Yellow light output
06	YV6	16	Empty	26	YV24	36	YV42	46	Master cylinder home output	56	Green light output
07	YV7	17	Empty	27	YV25	37	YV43	47	Motor start output	57	Buzzer output
										Oil cooler power	
										Safety door up	
										Safety door down	
										Safety Door Emergency	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	
										Spare	

✧ 气动功能界面 Pneumatic Function Interface


Vacuum function and other pneumatic actions can be set hereto meet clients' requirements.

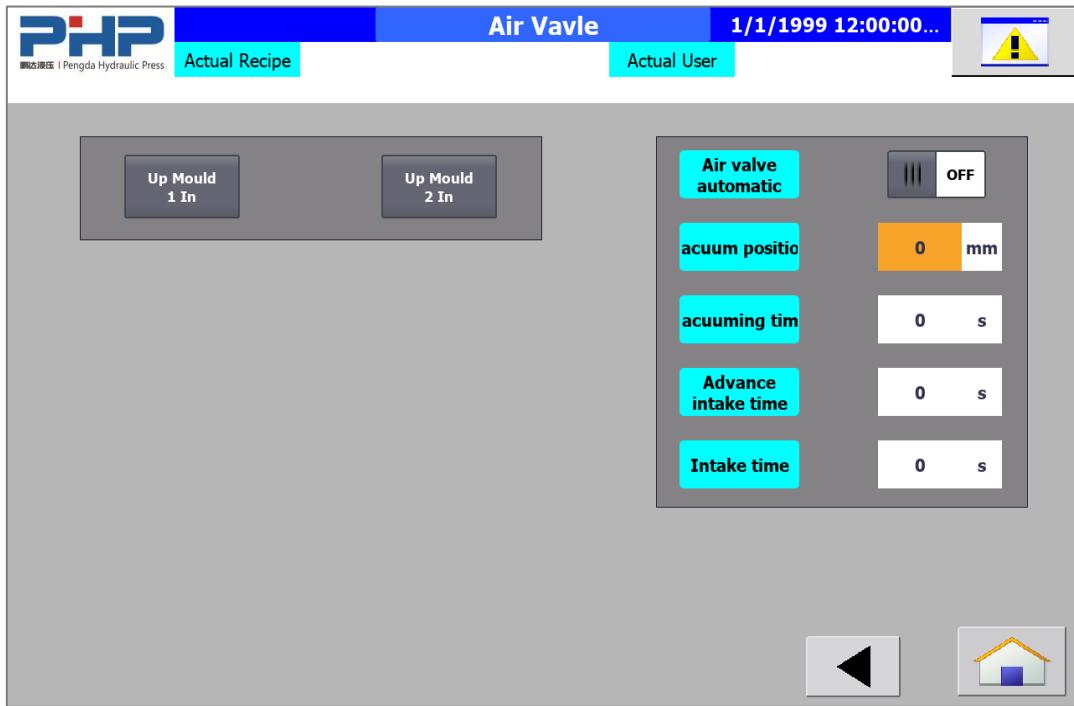

✧ Alarm Information Interface

The corresponding warning sign will appear when something goes wrong and the historical information will be displayed.



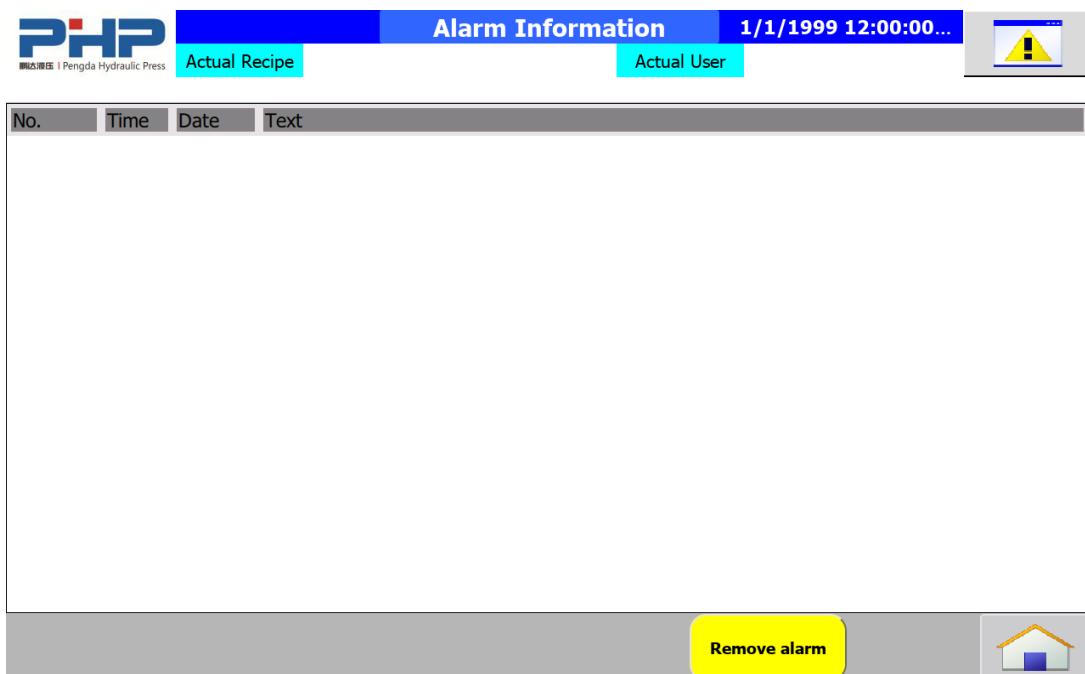

✧ User Management Interface

The press contains three-level password function and each password has different access right. One can log in and set the password.

